

WIRING DIAGRAM

SERIES	TYPE	WIRE FUNCTION			PART NUMBERS
		POWER	GROUND	SELECT	
BRISTOL	BEACON	RED	WHT	BRN	100BC0005-A, 100BC0006-A, 100BC0007-A
CHARLOTTE HIGH	BEACON	RED	WHT	BRN	100BC0001-A, 100BC0002-A
CHARLOTTE LOW	BEACON	RED	WHT	BRN	100BC0003-A, 100BC0004-A
DARLINGTON	BEACON	RED	BLK	N/A	100BC0015-A
RICHMOND	BEACON	RED	BLUE	GRN	100BC0011-A, 100BC0012-A
DAYTONA	LIGHT BAR	RED	BLUE	GRN	100LB0017-A
FONTANA	LIGHT BAR	RED	BLUE	GRN	100LB0027-A, 100LB0028-A, 100LB0029-A, 100LB0030-A
HOMESTEAD	LIGHT BAR	RED	BLK	YEL	100LB0008-C, 100LB0009-C, 100LB0010-C, 100LB0011-C, 100LB0012-C
PHOENIX	LIGHT BAR	RED	BLUE	GRN	100LB0032-A, 100LB0034-A, 100LB0036-A
POCONO	LIGHT BAR	RED	BLK	YEL	100LB0018-A, 100LB0019-A, 100LB0020-A, 100LB0021-A, 100LB0022-A
SONOMA	LIGHT BAR	RED	BLUE	GRN	100LB0024-A, 100LB0026-A
TALLADEGA	LIGHT BAR	RED	BLK	YEL	100LB0014-A
MICHIGAN OVAL	WARNING LIGHT	RED	BLK	WHT	100WA0001-A
MICHIGAN ROUND	WARNING LIGHT	RED	BLK	WHT	100WA0002-A
CIGARETTE LIGHTER ADAPTER					
SERIES	TYPE	OPERATING INSTRUCTIONS			PART NUMBERS
BRISTOL	BEACON	Cigarette lighter adapter has two switches 1. POWER ON/OFF 2. SELECT. To power the product, plug the adapter into cigarette outlet, switch on the POWER ON/OFF switch (red light illuminates). To switch flash patterns, momentarily press the SELECT switch. Repeat for next pattern. To power down the product, switch off the POWER ON/OFF switch (red light shuts off).			100BC0008-A, 100BC0009-A, 100BC0010-A
RICHMOND	BEACON				100BC0013-A, 100BC0014-A
DAYTONA	LIGHT BAR				100LB0015-A, 100LB0016-A
PHOENIX	LIGHT BAR				100LB0031-A, 100LB0033-A, 100LB0035-A
SONOMA	LIGHT BAR				100LB0023-A, 100LB0025-A
TALLADEGA	LIGHT BAR				100LB0013-A