

WIRING DIAGRAM

| | | WIRE FUNCTION | | | |
|----------------------------------|---------------|---|--------|--------|---|
| SERIES | TYPE | POWER | GROUND | SELECT | PART NUMBERS |
| BRISTOL | BEACON | RED | WHT | BRN | 100BC0005, 100BC0006, 100BC0007 |
| CHARLOTTE HIGH | BEACON | RED | WHT | BRN | 100BC0001, 100BC0002 |
| CHARLOTTE LOW | BEACON | RED | WHT | BRN | 100BC0003, 100BC0004 |
| DARLINGTON | BEACON | RED | BLK | N/A | 100BC0015 |
| RICHMOND | BEACON | RED | BLUE | GRN | 100BC0011, 100BC0012 |
| DAYTONA | LIGHT BAR | RED | BLUE | GRN | 100LB0017 |
| FONTANA | LIGHT BAR | RED | BLUE | GRN | 100LB0027, 100LB0028, 100LB0029, 100LB0030 |
| HOMESTEAD | LIGHT BAR | RED | BLK | YEL | 100LB0008, 100LB0009, 100LB0010, 100LB0011, 100LB0012 |
| PHOENIX | LIGHT BAR | RED | BLUE | GRN | 100LB0032, 100LB0034, 100LB0036 |
| POCONO | LIGHT BAR | RED | BLK | YEL | 100LB0018, 100LB0019, 100LB0020, 100LB0021, 100LB0022 |
| SONOMA | LIGHT BAR | RED | BLUE | GRN | 100LB0024, 100LB0026 |
| TALLADEGA | LIGHT BAR | RED | BLK | YEL | 100LB0014 |
| MICHIGAN OVAL | WARNING LIGHT | RED | BLK | WHT | 100WA0001 |
| MICHIGAN ROUND | WARNING LIGHT | RED | BLK | WHT | 100WA0002 |
| CIGARETTE LIGHTER ADAPTER | | | | | |
| SERIES | TYPE | OPERATING INSTRUCTIONS | | | PART NUMBERS |
| BRISTOL | BEACON | Cigarette lighter adapter has two switches 1. POWER ON/OFF 2. SELECT. To power the product, plug the adapter into cigarette outlet, switch on the POWER ON/OFF switch (red light illuminates). To switch flash patterns, momentarily press the SELECT switch. Repeat for next pattern. To power down the product, switch off the POWER ON/OFF switch (red light shuts off). | | | 100BC0008, 100BC0009, 100BC00010 |
| RICHMOND | BEACON | | | | 100BC0013, 100BC0014 |
| DAYTONA | LIGHT BAR | | | | 100LB0015, 100LB0016 |
| PHOENIX | LIGHT BAR | | | | 100LB0031, 100LB0033, 100LB0035 |
| SONOMA | LIGHT BAR | | | | 100LB0023, 100LB0025 |
| TALLADEGA | LIGHT BAR | | | | 100LB0013 |