

## WIRING DIAGRAM

		WIRE FUNCTION			
SERIES	TYPE	POWER	GROUND	SELECT	PART NUMBERS
BRISTOL	BEACON	RED	WHT	BRN	100BC0005, 100BC0006, 100BC0007, 100BC0017
CHARLOTTE HIGH	BEACON	RED	WHT	BRN	100BC0001, 100BC0002
CHARLOTTE LOW	BEACON	RED	WHT	BRN	100BC0003, 100BC0004
DARLINGTON	BEACON	RED	BLK	N/A	100BC0015
RICHMOND	BEACON	RED	BLUE	GRN	100BC0011, 100BC0012
DAYTONA	LIGHT BAR	RED	BLUE	GRN	100LB0017
FONTANA	LIGHT BAR	RED	BLUE	GRN	100LB0027, 100LB0028, 100LB0029, 100LB0030
HOMESTEAD	LIGHT BAR	RED	BLK	YEL	100LB0008, 100LB0009, 100LB0010, 100LB0011, 100LB0012
PHOENIX	LIGHT BAR	RED	BLUE	GRN	100LB0032, 100LB0034, 100LB0036
POCONO	LIGHT BAR	RED	BLK	YEL	100LB0018, 100LB0019, 100LB0020, 100LB0021, 100LB0022
SONOMA	LIGHT BAR	RED	BLUE	GRN	100LB0024, 100LB0026
TALLADEGA	LIGHT BAR	RED	BLK	YEL	100LB0014
MICHIGAN OVAL	WARNING LIGHT	RED	BLK	WHT	100WA0001
MICHIGAN ROUND	WARNING LIGHT	RED	BLK	WHT	100WA0002
<b>CIGARETTE LIGHTER ADAPTER</b>					
SERIES	TYPE	OPERATING INSTRUCTIONS			PART NUMBERS
BRISTOL	BEACON	Cigarette lighter adapter has two switches 1. POWER ON/OFF 2. SELECT. To power the product, plug the adapter into cigarette outlet, switch on the POWER ON/OFF switch (red light illuminates). To switch flash patterns, momentarily press the SELECT switch. Repeat for next pattern. To power down the product, switch off the POWER ON/OFF switch (red light shuts off).			100BC0008, 100BC0009, 100BC0010, 100BC0018
RICHMOND	BEACON				100BC0013, 100BC0014
DAYTONA	LIGHT BAR				100LB0015, 100LB0016
PHOENIX	LIGHT BAR				100LB0031, 100LB0033, 100LB0035
SONOMA	LIGHT BAR				100LB0023, 100LB0025
TALLADEGA	LIGHT BAR				100LB0013