



PHOENIX Class 1 LED Light Bar Installation Instructions


For model numbers: 100LB0031, 100LB0032, 100LB0033, 100LB0034, 100LB0035, 100LB0036





SECTION 1: MOUNTING — 2 OPTIONS

1. MAGNET MOUNT - 100LB0031, 100LB0033, 100LB0035

Determine a clean, flat location on your vehicle to mount the light bar (typically the roof). This light bar comes equipped with four magnetic feet. Ensure the magnetic feet are clean before placing on your vehicle. It is the responsibility of the installer and/or end user to determine whether it is safe to use magnetic mounting hardware for your application. The magnetic character of roof steel varies from vehicle to vehicle. Be sure that your vehicle can provide enough magnetic force to safely secure the light bar to the roof.

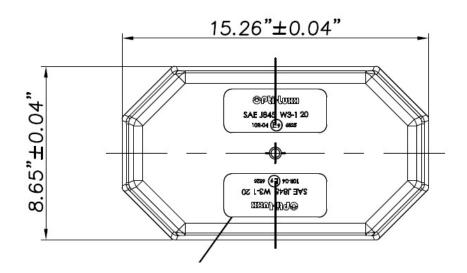

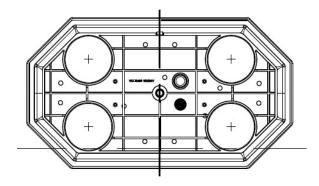

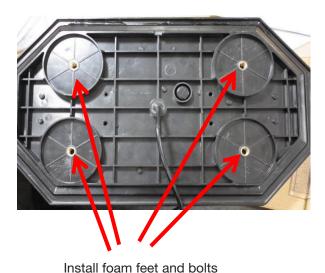

2. FOUR-STUD MOUNT - 100LB0032, 100LB0034, 100LB0036

The bar is supplied with the following hardware for mounting:

- 4 double ended bolts
- 4 foam cushions
- 4 flat washers
- 4 spring washers
- 4 flange nuts
- **1.** Thread the shorter ends of the double ended bolts into the four circles on underside of the light bar.
- **2.** Place the four foam cushions on top of the double ended bolts.
- **3.** Stack a flat washer and a spring washer on top of the foam cushion.
- **4.** After holes are drilled, tighten flange nut and secure to the vehicle.

NOTES

Before drilling holes, carefully measure to find the desired location on the vehicles roof. Ensure damage is not done to electronics, the roof lining and the roof structure is not compromised. The holes should be of a suitable size. You must drill an extra holefor the cable. It is recommended using a suitable waterproof sealant (and suitable rubber grommet for the cable) to ensure the roof is waterproof. It is also important to treat the holes drilled in the roof with a suitable rust prevention solution. Do not overtighten flange nuts.

SECTION 2: WIRING OPTIONS — 2 OPTIONS



1. CIGARETTE LIGHTER ADAPTER — 100LB0031, 100LB0033, 100LB0035

To turn on, plug the adapter into cigarette outlet and avoid obstructing the steering wheel, gear leaver, airbags or the view of the driver. Switch ON/OFF to on (red light illuminates). To select flash patterns, momentarily press the select switch to toggle between flash patterns until the desired pattern is found. Switch ON/OFF to off to power down the product. The light bar will recall the last flash pattern that was selected before powering down as the default. This default pattern will be in effect when powered back on during its next use.

2. WIRE FUNCTION - 100LB0032, 100LB0034, 100LB0036

Red - Power

Blue - Ground

Green – Select (To change the flash pattern, touch and hold to power wire for one second until the desired pattern is selected).

NOTE: QR Code to Wiring chart on website: https://opti-luxx.com/resources

SECTION 3: FLASH PATTERN DETAIL

PATTERN	DESCRIPTION	CYCLE (ms)	FPM
1***	SINGLE FLASH	400	150
2	RAPID DIRECTIONAL	968	62
3	RAPID ALTERNATING	1232	49
4	RAPID DIRECTIONAL + RAPID ALTERNATING + FLASH	4400	14
5	ROTATING	768	78
6	FLASH ROTATING	1490	40
7	ALTERNATING + RAPID ALTERNATING + RAPID FLASH	3040	20
8	FLASH + RAPID FLASH +RAPID	3352	18
9	QUAD	1128	53
10	FLASH + RAPID ALTERNATING + ROTATING	2656	23

* DEFAULT PATTERN

PATTERN SETTING: A) POWER BEACON B) MOMENTARILY PRESS THE SELECT SWITCH C) REPEAT FOR NEXT PATTERN

NOTES

1. Lights to meet the following requirements:

A. FMVSS/CMVSS 108

B. SAE Standards: J845/2139

2. Operating Conditions:

A. Voltage:

Automotive: 9–16Vdc.Industrial: 10–30Vdc.

B. Current:

Nominal: See Table
Min/Max: See Table
C. Temperature: -40° to +65°C

Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices. Improper use or installation may void warranty coverage.

If you have questions regarding this product, please refer to our website: **www.opti-luxx.com/resources** or you may email Customer Service at: **customerservice@opti-luxx.com.**

















^{**} SAE J845 CLASS 1 COMPLIANT